


TRANSMITTER & RECEIVER REPLACEMENT

To replace either the hand held transmitter or receiver unit please follow these instructions;

Transmitter Replacement

To replace a transmitter on an existing receiver unit simply press the set-up button located at the bottom of the receiver mounted on the back of the cab 5 times very quickly (see photo). An indicator light labeled "ACTIVITY" will blink back at you 5 times to confirm its ready for a new handheld. Next press any button on the new handheld to complete the process. The "ACTIVITY" led on the receiver will blink again to confirm its working. The new transmitter is now dedicated to that specific receiver.

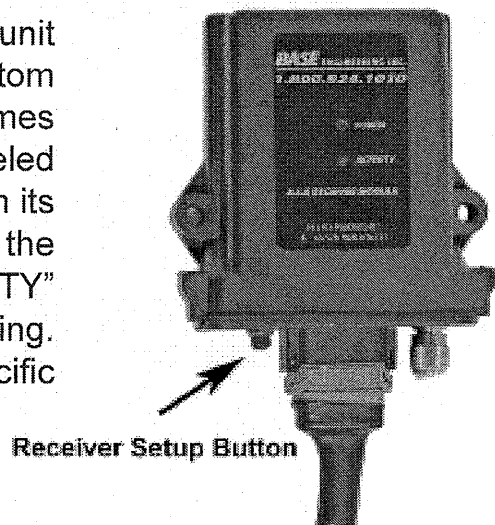

Receiver Replacement

When replacing a receiver you still must dedicate the unit to the handheld. Please follow the transmitter replacement instructions listed above. In the event that the individual channels require reprogramming please follow these simple steps;

Steps to program each channel:

1. Turn power off to the receiver unit.
2. Remove the cover of the receiver unit and locate the set-up push button on the internal circuit board as well as the indicator LED beside it. This button is used to program all internal settings in the receiver.
3. Turn power on to the receiver unit – watch that the indicator led blinks once – this indicates that the receiver is functioning properly. Once you have started the programming operation if you lose track of your place in the sequence, turn the power off and then on again to start the operation over.
4. Press the set-up button 10 times in a row – quite quickly – about 2-3 times a second. Once the button has been pressed 10. Verify the LED indicator blinks 10 times. The receiver is now in **“learning mode”**.
5. Once the led has blinked 10 times, the receiver unit is waiting for the **“channel number”**. Press the button the number of times corresponding to the channel you wish to set. For example, one press for channel 1, two presses for channel 2.
6. The led will blink the number of times to verify that you have selected the correct channel. If you have not selected the proper channel or lose track of how many times you have pressed the button, turn the power off and then on again and start from the first step above.