

Field repair for Auto Neutral Function on International trucks.

If a problem occurs with the proximity switches on the rear deck of the truck we have provided a way to bypass the proximity switches until a repair can be made.

The two proximity switches are on the 2" fill and in the nozzle holder. If the nozzle or the fill cap is removed, the truck will not move from the neutral position on the transmission.

If the nozzle is in the holster and the fill cap is on there may be a problem with one or both proximity switches.

REPAIR

In the cab there will be a plastic bag with two plugs in it.



The two plugs can be attached to the wiring harness on the frame rail near the rear deck. This will bypass the proximity switches.



This should let the transmission operate normally.

The proximity switches should be repaired as soon as possible.