

How to remove running light function on upper yellow turn light.



Some trucks left our shop without cutting the factory brown wire  
Inside the light housing.


This causes the yellow light to become a running light.  
A steady yellow light is not legal.

To fix the problem is a quick easy fix.  
Take a screw drive and pry the light from the housing.

After removing the light you will see a brown wire connected to the light.  
The brown wire is the one the arrow is pointing to in the next picture.



Take the brown wire and cut it in half.  
This will remove the power to the running light.  
Tape both ends of the wire to insure no accidental grounding will take place.  
Replace the light and you are done.  
Double check the turn signal function.

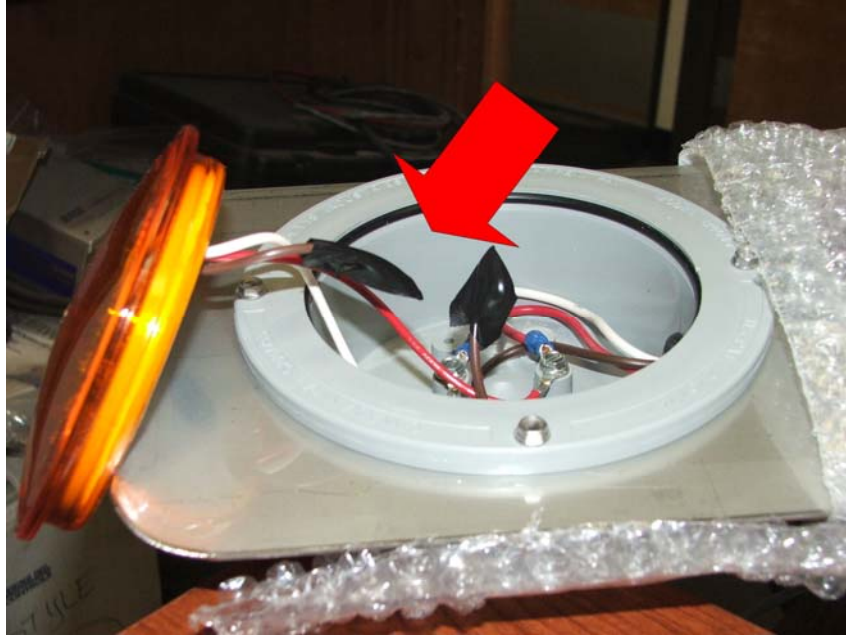

Thanks for your help in repairing this Issue.  
If you have any questions call.  
Ken  
Pacific Truck Tank.  
1-800-350-9030  
1916-379-9280